




Special Instructions

Telephone: 250-740-3200 Fax: 250-740-3201

Throttle and Park Brake Bypass Installation

Manual Transmission Vehicles


1. Install the throttle and park brake bypass in a convenient location.
2. Connect the ground wire to the same location as the interface ground.
3. Connect the wire labeled **PARK BRAKE WIRE** from the bypass to the black wire with the piggyback from the interface connector. Flatten the piggyback connector with pliers and tape the connection.
4. Remove the OEM connector from the park brake switch.
5. Connect the wire labeled **PARK BRAKE SWITCH (A)** from the bypass to the park brake switch. Attach the OEM connector to the piggyback connector.
6. Connect the red wire from the interface connector to the wire labeled **THROTTLE WIRE** on the bypass. Tape the connection.
7. Connect the wire labeled **THROTTLE CONTROL (B)** from the bypass to the VMAC throttle controller on the engine.
8. Complete all other wiring according to the VR Installation Instructions and fasten all wires out of the way using nylon ties or tape.

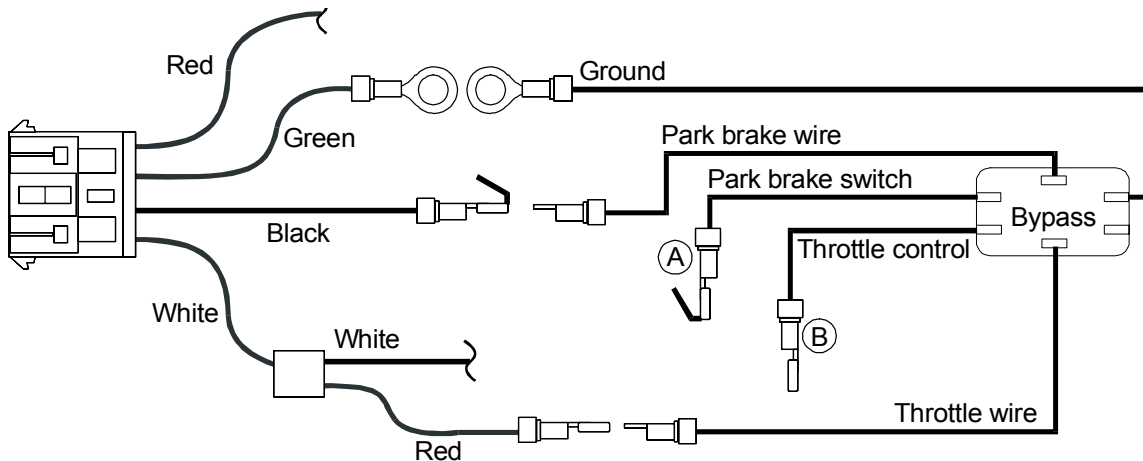

Bypass Connections – Manual Transmissions

Automatic Transmission Vehicles

1. Install the throttle and park brake bypass in a convenient location.
2. Connect the ground wire to the same location as the interface ground.
3. Connect the wire labeled **PARK BRAKE WIRE** from the bypass to the black wire with the piggyback from the interface connector. Flatten the piggyback connector with pliers and tape the connection.
4. Install the DDC (Drive Disable Circuit) in a convenient location.
5. Connect the black wire from the DDC to the wire with the piggyback connector labeled **PARK BRAKE SWITCH** from the bypass. Flatten the piggyback connector with pliers and tape the connection.
6. Remove the OEM connector from the park brake switch.
7. Connect the black wire with the piggyback connector (A) from the DDC to the park brake switch. Attach the OEM connector to the piggyback connector at the park brake switch.
8. Connect the red wire from the interface connector to the wire labeled **THROTTLE WIRE** on the bypass. Tape the connection.
9. Complete all other wiring according to the VR7000 Installation Instructions and fasten all wires out of the way using nylon ties or tape.

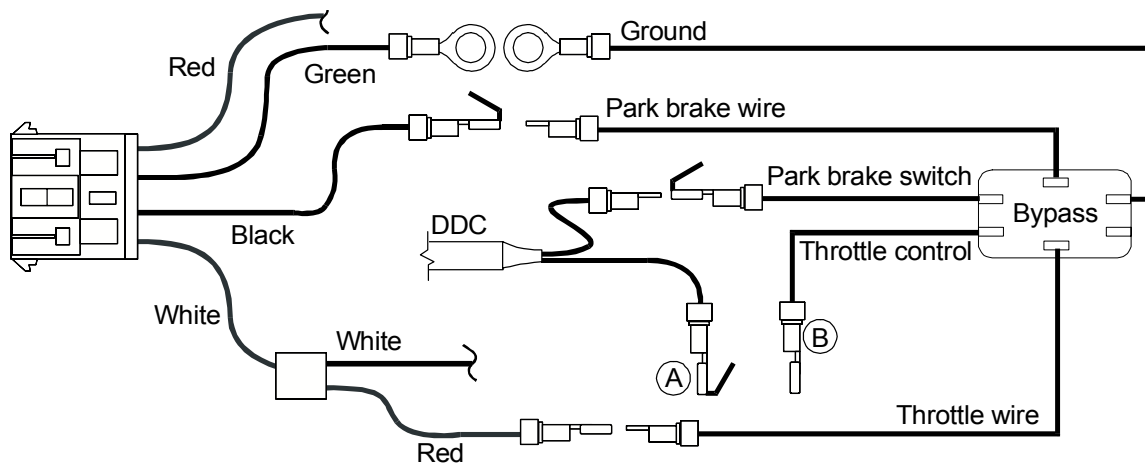

Bypass Connections – Automatic Transmissions