

VMAC Kit 3550859

1900981 Installation Instructions

Pressure Switch Boot

Important Information

The information in this manual is intended for certified VMAC installers who have been trained in installation procedures and for people with mechanical trade certification who have the tools and equipment to properly and safely perform the installation. Do not attempt this installation if you do not have the appropriate mechanical training, knowledge and experience.

Follow all safety precautions for mechanical work. If you have difficulty with the installation, contact VMAC.

To order parts, contact your VMAC dealer. Your dealer will ask for the VMAC serial number, part number, description and quantity. To locate your nearest dealer, call 1-888-241-2289, or see our website www.vmacair.com and click 'Find a Dealer'.

Notice: Manuals and products are subject to change without notice

Document #1900981

Version	Revision Details	Revised by/date	Checked by/date	Reviewed by/date	Implemented
A	Release	SM 25 Sep 2013	MH 25SEP2013	RD 25SEP2013	25SEP2013

Copyright 2013

All trademarks used in this manual are the property of the respective copyright holder.

The contents of this manual may not be reproduced in any form without the express written permission of VMAC, 1333 Kipp Road, Nanaimo, BC V9X 1R3.

Printed in Canada

VMAC – Vehicle Mounted Air Compressors


Toll Free: 1-888-241-2289

Local: 1-250-740-3200

Fax: 1-250-740-3201

Installation

- If pressure switch has failed, replace as follows:

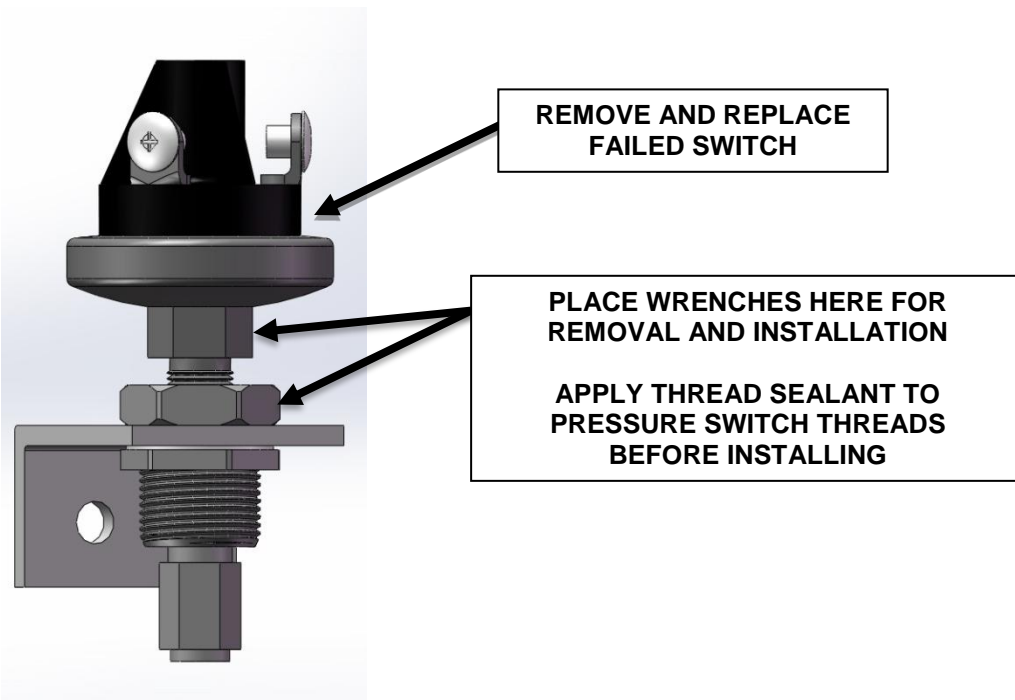

- Remove the two screws from the pressure switch.
- Install the supplied blue and purple wires with ring terminals onto the pressure switch. Order is not critical.
 - Before tightening, ensure the wires are running in-line with the fittings. See figure below.




- Install the rubber boot over the pressure switch ensuring that the wires are in the split cavities and the edge of the boot fully covers the chrome base of the switch. See figure below.



- Cut off the original terminals on the wiring harness.



CUT OFF TERMINAL HERE

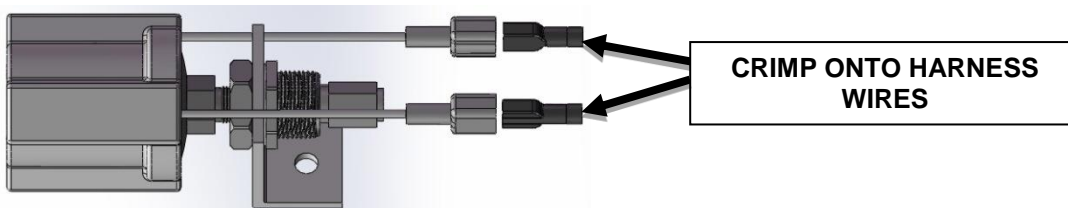

CRIMP ONTO HARNESS WIRES

- Crimp the supplied terminals onto the harness.
- Connect the wires from the pressure switch to the mating terminals on the harness. Blue to blue. Purple to purple.
- Run the system to confirm proper operation.