


# In-Cab Temperature Sensor Accessory

A700185

UnderHood-G Systems

## Installation Instructions

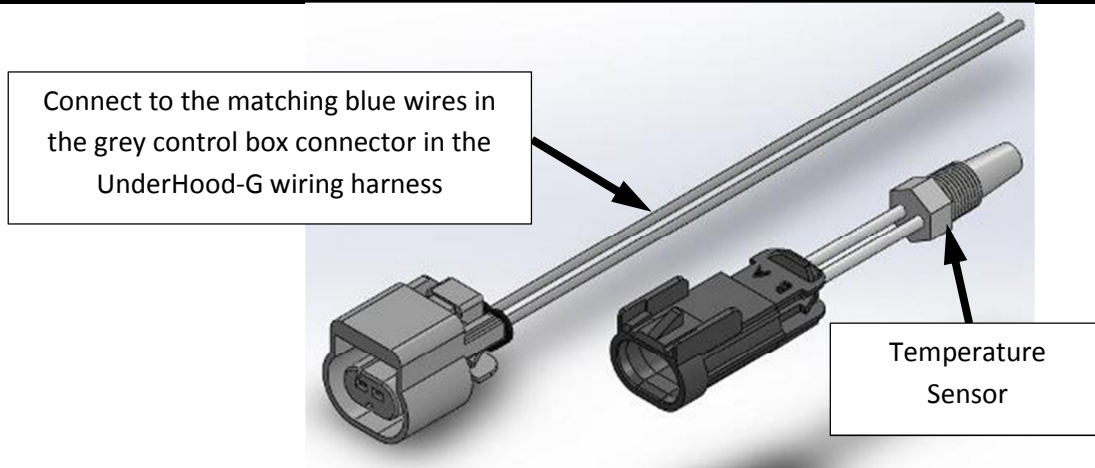

- Locate a suitable place to mount the temperature sensor inside the cab of the truck using the supplied P-clip. Clamp the brass body of the sensor with the clip. The sensor should be kept away from heat ducts and drafts created when the doors are opened.
- Connect the supplied mating pigtail to the sensor.
- Find the matching blue pigtails in the grey connector in the control box attached to the UnderHood-G wiring harness. (Typically mounted behind the dash on the driver's side)



***If this is an upgrade to an existing UnderHood-G system without the pigtail wires in the harness, contact VMAC Technical Support 1-888-241-2289 for details on add'l parts required.***

- Extend these two wires with additional 18 AWG wire and connect them to the pigtail connected to the temperature sensor. Polarity does not matter. Solder and seal these connections with heatshrink.



***Keep the wiring away from hot and/or moving parts.***

- Refer to the UnderHood-G Owner's Manual to enable this feature and adjust the settings.

Document #1900965

Version	Revision Details	Revised by/date	Checked by/date	Reviewed by/date	Implemented
A	ECN 13-019, Engineering Release	SM/27Mar2013	SM/27Mar2013	RD/27Mar2013	SM/27Mar2013

Copyright 2013 All trademarks used in this manual are the property of the respective copyright holder. The contents of this manual may not be reproduced in any form without the express written permission of VMAC, 1333 Kipp Road, Nanaimo, BC V9X 1R3. Printed in Canada

**VMAC – Vehicle Mounted Air Compressors**

Toll Free: 1-888-241-2289

Local: 1-250-740-3200

Fax: 1-250-740-3201